

Deleting Images from the Document Camera

Using the Capture function, you can store images into the document camera to use during the playback mode and/or copy to your computer. You can delete these images individually or you can use a menu feature to quickly delete all images.

To individually delete images:

- 1.** Place the camera in **PLAYBACK** mode.
You will either see a full-sized image or thumbnails of the images. You can delete images that are displayed as full-sized or thumbnail.
- 2.** Use the arrow keys to display or highlight the image to delete.
- 3.** To permanently remove the selected picture:
On the document camera, press **CAP/DEL**.
-OR-
On the remote, press **DEL** (red).

To delete all images quickly:

- 1.** Place the camera in **CAMERA** mode.
- 2.** On the remote or the document camera, press **MENU**.
On your screen, the menu options display.
- 3.** Press the **down arrow** ▼ to highlight **ADVANCE**.
- 4.** Press the **right arrow** ►.
The Advance menu displays.
- 5.** Press the **down arrow** ▼ to highlight **IMG FORMAT**.
- 6.** Press the **right arrow** ►.
- 7.** Press the **down arrow** ▼ to highlight **YES**.
- 8.** Press the **right arrow** ►.
- 9.** Press **MENU** until the menu options no longer display.